

Hello!

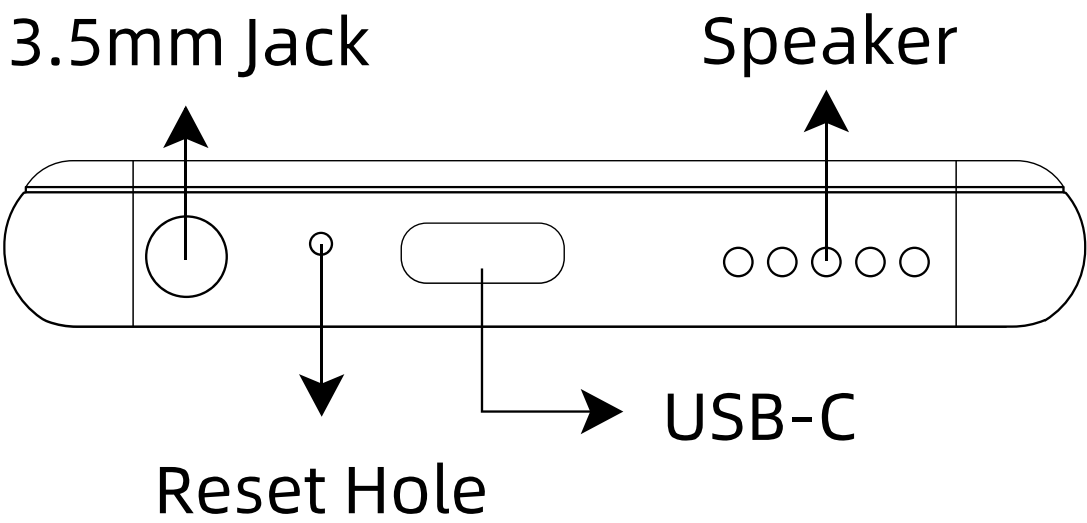


INNIOASIS Y1

Mp3 Music Player



Click wheel



Click wheel

- **Return / MFB (Multi-Function Buttons)**

Short press to go back to the previous page, long press to activate certain specific functions or shortcut menus, such as A-B repeat, bookmarks, etc.

- **Previous (Rewind)**

Short press to skip to the previous track, long press for fast rewind.

- **Next (Forward)**

Short press to skip to the next track, long press for fast forward.

- **Play(Pause) / Stop**

Short press to play or pause, long press to stop playing.

- **Volume + (-) / Scroll menu**

Swipe clockwise to increase the volume, scroll down or swipe right to navigate the menu.

Swipe anticlockwise to decrease the volume, scroll up or swipe left to navigate the menu.

- **Power On / Turn Off (Wake Up) Screen / Confirm Option /**

When powered off, press and hold for 3 seconds to turn on.

When running, press and hold for 2 seconds to turn off the screen and enter power-saving mode, Short press to wake up.

While navigating the menu, press briefly to confirm the currently selected option or switch the option value.

Tips: To shut down, please go to Settings >> Shutdown.

- **3.5mm Jack**

Connect to wired headphones or speaks to output sound.

- **USB-C Jack**

Connect to a computer or adapter for charging or files transfer.

Speaker

Built-in speaker for audio output.

Reset Hole

Press with a pin to force shutdown. Typically used when the device freezes or crashes.

How to Transfer Music / Video / Audiobooks to The Player?

1. Connect Y1 player to your computer with the included USB-C cable.
2. Short press the button **OK** on Y1 player to confirm "Turn on USB storage".
3. Click "This PC" on your computer's desktop, you will find a USB drive added to the list of devices and drives.
4. Copy the music that has been downloaded on the computer and paste it into this newly added USB drive.
5. After completing the file transfer, click the button **OK** again to turn off USB storage, and press **↩/⏏** to return to homepage.

Tips: If you turn on USB storage, some apps you 're running will stop and may be unavailable until you turn off USB storage.

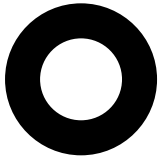
How to charge the player

Y1 player only supports charging with a USB-A to USB-C cable and does not support USB-C to USB-C cables for charging. Therefore, please ensure you use the correct type of cable for charging.

To charge, simply connect the USB-A end to your computer or adapter, and the USB-C end to the player.

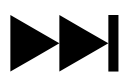
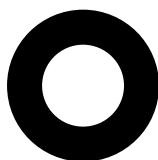
Home

Y1 home interface lists all the applications, including: Now Playing, Music, Video, Audiobook, Photos, FM Radio, Bluetooth, Settings, and Shuffle Quick.

Key	Action	Result
	Swipe clockwise	Scroll down to the target app
	Swipe Anticlockwise	Scroll up to the target app
	Short press	Confirm to launch the selected app <i>When the screen is off, Short press to wake up the screen</i>
	Long press	Long press for 2 seconds to turn off the screen

Now Playing

Quickly enter the playback interface to view the currently playing song or audiobook. The following actions are available on the click wheel.

Key	Action	Result
	Short press	Prev track
	Long press	Fast rewind
	Short press	Next track
	Long press	Fast forward
	Short press	Back to Prev-level
	Long press	Activate bookmark (for audiobook) Activate A-B repeat (for music)
	Short press	Play / Pause
	Long press	Stop playing
	Swipe clockwise	Volume +
	Swipe Anticlockwise	Volume -

Key	Action	Result
	Short press	Switch to the lyrics window <i>(Tap again to return to Now Playing)</i>
	Long press	Long press for 2 seconds to turn off the screen

FAQ

1) How to shue ?

Go to Setting>>Shue, click the key  to switch the option value to "On".

2) How to get list loop?

Go to Setting>>Repeat, click the key  to switch the option value to "List loop".

3) How to view lyrics?

In the Now playing window, short press  to switch to lyrics display. Short press again to return to the Now playing.

4) Can I add a bookmark for audiobooks?

Yes. When playing audiobooks, long press the key  to pop up the dialog box, and then confirm to add to bookmark. All created bookmarks are preserved in Audiobook --- Bookmark lists.

5) Does the device have A-B replay and how to operate it?

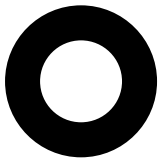
A-B repeat is only available for music playing. When playing music, long press the key  to activate A-B repeat and generate point A, long press the key  again to generate point B.

****** If you want to use A-B repeat while playing audiobook, please do not store the audiobook file in the Audiobooks folder. By default, only files stored in the "Audiobooks" folder are recognized as audiobook, while those stored in other folders are recognized as music.***

6) Does the device have an equalizer and how to operate it?

Yes. Y1 is equipped with EQ. You can go to Settings -- Equalizer to select your favorite preset style. To customize the EQ, navigate to a preset style and long-press the key  to activate the customized EQ window. Then, use  or  to navigate to the desired band, and adjust its value by swiping the Click Wheel either clockwise or anticlockwise. Once the adjustment is complete, click the key  to prompt a window asking, "Save equalizer parameter changes." Select "Yes" to confirm.

Music

Key	Action	Result
	Swipe clockwise	Scroll down / right menu or track
	Swipe Anticlockwise	Scroll up / left menu or track
	Short press	Confirm the selected menu or track
	Long press	Long press for 2 seconds to turn off the screen <i>(Short press to wake up.)</i>
	Short press	Back to Prev-level
	Long press	Activate the multifunctional menu

How to Quick Shuffle

At the top of the song list window in all folders (such as All Songs, Playlist, Artists, etc.), there is a "  Shuffle" option. Selecting it will randomly play all the songs in the current folder or list by default.

About The Multifunctional Menu

Long press the key ⇨/⌘ in all folders under Music app to pop up a multifunctional menu.

- **Sort by Songname:** Select the sorting type as "Sort by Songname".

"Songname" refers to the title of the song in the meta data. Currently, the player can recognize meta data for MP3, M4A, FLAC, OGG, M4R, APE files, but it cannot recognize meta data for WMA, AAC, AMR, or MMF files.

- **Sort by Filename:** Select the sorting type as "Sort by Filename".
- **Subdiv By Album:** Under the Artist category, "Subdiv by Album" allows you to further categorize the artist's songs by album name.
- **Multi Select--** Select multi songs / files one by one.
- **All Select--** Select all songs / files in the current folder.
- **Delete File--** Delete the selected song / file.
- **Add to Playlist 1,2,3···--** Add the selected songs to target playlist.

About Sorting Types

In all folders of music app (including All Songs, Playlists, Artists, Albums), you can choose the following sorting types.

1) Sort by Filename

- >> A-Z (default): Displays the filename of the song (not title) and arranges it in the order of 1-9, A-Z.
- >> Z-A: Displays the filename of the song (not title) and arranges it in the order of Z-A, 9-1.
- >> Create time asc.: Displays the filename of the song (not title) and sorts it in ascending order of file creation time, with the oldest files listed first and the most recent files listed last.
- >> Create time desc.: Displays the filename of the song (not title) and sorts it in descending order of file creation time, with the oldest files listed last and the most recent files listed first.

2) Sort by Songname

- >> A-Z: Displays the title of the song (i.e., the title of the song matabata) and arranges it in the order of 1-9, A-Z.
- >> Z-A: Displays the title of the song (i.e., the title of the song matabata) and arranges it in the order of Z-A, 9-1.

Tips:

- *The Sorting type in the file list determines the playback order of all songs under that folder when in sequential playback mode.*
- *Y1 can recognize metadata for MP3, M4A, FLAC, OGG, M4R, APE files, but it cannot recognize meta data for WMA, AAC, AMR, or MMF files. This means that when you select "Sort by Songname" , songs lacking meta info will have their titles displayed as "Unknown".*

About Playlist

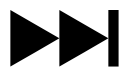
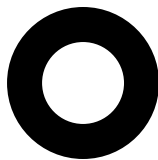
Y1 Player allows you to add, delete, rename playlists. Long press the key  in the playlist folder to pop up the multifunctional menu, and then select the operation you want.

- New Playlist—Add a new playlist, the default name of the new playlist is Playlist 6, 7...
- Delete Playlist— Delete the current playlist.
- Rename -- Rename the current playlist.

About Search

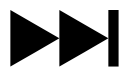
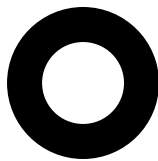
Y1 Player allows you to search for a target track or album by part or all of the song title. Click "Search" and enter some or all of the song names in the pop-up input box to preview the search results above the input

box. For more operations, please refer to the table below

Key	Action	Result
	Short press	backspace - deletes one character per press
	Long press	Continuous backspace
	Short press	Space - Enter a space each time press
	Swipe clockwise	Scroll down or right letter options
	Swipe Anticlockwise	Scroll up or left letter options
	Short press	Confirm and input the selected letters into the text box.
	Long press	Long press for 2 seconds to turn off the screen <i>(Short press to wake up.)</i>

Key	Action	Result
↩/⌘	Short press	Close the input box and return to search results
	Long press	Activate the multifunctional menu (available for search result page)

Video

Key	Action	Result
	Short press	Prev video or menu item
	Long press	Fast rewind / Prev menu item
	Short press	Next video or menu item
	Long press	Fast forward / Next menu item
	Short press	Back to Prev-level
	Long press	Activate the multifunction menu
	Short press	Play / Pause
	Swipe clockwise	Volume + / Scroll down the menu item
	Swipe Anticlockwise	Volume - / Scroll up the menu item
	Short press	Confirm the current selection

Key	Action	Result
	Long press	Long press for 2 seconds to turn off the screen <i>(Short press to wake up.)</i>

About The Multifunctional Menu

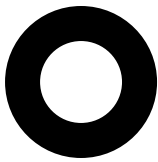
Long press the key  in all folders under the videos app to pop up a multifunctional menu.

- **Sort by Filename:** Select the sorting type as "Sort by Filename".
- **Multi Select--** Select multi videos / files one by one.
- **All Select--** Select all videos / files in the current folder.
- **Delete File--** Delete the selected videos / files.
- **Add to Playlist 1,2,3····--** Add the selected videos to target playlist.
- **New Playlist—** Add a new playlist, the default name of the new playlist is Playlist 6, 7···

- **Delete Playlist**— Rename the current playlist.
- **Rename**-- Rename the current playlist.

Audiobook

Note: Only books stored in the device's "Audiobooks" folder are recognized as audio books. Audiobooks stored elsewhere will be recognized as music

Key	Action	Result
	Swipe clockwise	Scroll down / right menu or book
	Swipe Anticlockwise	Scroll up / left menu or book
	Short press	Confirm the selected menu or book
	Long press	Long press for 2 seconds to turn off the screen <i>(Short press to wake up.)</i>
	Short press	Back to Prev-level
	Long press	Activate the multifunction menu or add to bookmarks

About The Multifunctional Menu

Long press the key ⇨/⌘ in all folders of Audiobook app to pop up a shortcut menu for file management:

- **MultiSelect--** Select multiple audiobooks or files one by one.
- **All Select--** Select all audiobooks / files in the current folder.
- **Delete File--** delete the selected audiobook or file.

About bookmark

In the audiobook playback window, long press the button ⇨/⌘ to activate the bookmark function, prompting "Add to bookmark ? ". Click "Yes" to add a new bookmark for the audiobook. All bookmarks are stored in the Bookmark lists folder.

Long press the button ⇨/⌘ in the bookmark list to pop up a shortcut menu, allowing you to select all, multi select, and delete bookmarks.

About the settings of audiobook app

Note: The settings under the Audiobook app apply only to the playback of audiobooks and do not affect music playback. Similarly, changes

made in the device settings will not affect audiobook playback.

- **Shuffle**-- enable/disable shuffle mode.
- **Repeat**-- enable/disable loop playback, Options include: List loop, Single loop, Off.
- **Speed**-- Adjust playback speed, The available options include: Slow, Normal, Fast, Fastest.
- **Time off**-- Set stop playing time, The available options include: Off, 10min, 20min, 30min, 60min.

FAQ:

1) How to add a bookmark

When playing the audiobooks, long press the button  to pop up the dialog box asking "Add to bookmark?" , Click "Yes" to confirm. All created bookmarks are preserved in Audiobook>>Bookmark lists.

2) Why didn't I find the audio books uploaded to the device?

To avoid confusion between music files and audiobooks, only books stored in "Audiobooks" folder will be recognized as audiobooks by default. Books stored elsewhere will be recognized as music. Therefore, make sure you upload the audiobooks to the audiobooks folder.

Tips: encrypted audiobooks cannot be recognized, such as .m4b, aax file.

3) Why can't my audiobooks and podcasts remember the last playback position, and every time I choose to play it from the folder, it starts from the beginning?

The resume playback function only applies to audiobooks and podcasts stored in the "Audiobooks" folder on the device. Audio files stored in other locations are defaulted to music files and will not utilize this feature.

Photo

Key	Action	Result	
		In Folder and Photo List Window	In Picture Browse Window
⏮	Short press	Navigate to Prev folder / file / picture	Browse Prev picture
⏭	Short press	Navigate to Next folder / file / picture	Browse Next picture
↶/⌂	Short press	Back to pre-level	Back to pre-level
	Long press	Activate the multifunctional menu	Activate the multifunctional menu
⦿	Swipe clockwise	Scroll down or right menu item / file	Jump to the next picture
	Swipe Anticlockwise	Scroll up or left menu item / file	Jump to the previous picture
Ⓞ	Short press	Confirm the selected menu item / file	Fit to Screen / Restore
	Long press	Long press for 2 seconds to turn off the screen	

About The Multifunctional Menu

In the folder / picture list window and picture browsing window, long press the button  to bring up the multifunctional menu, as below:

-  **Delete--** Delete the selected folder / file / picture.
-  **MultiSelect--** Activate multi-select, and you can select multiple target files one by one.
-  **All Select--** Select all folders, files and picture.
-  **Rename--** Rename the current folder, file or picture.
-  **As Wallpaper--** Set the current picture as desktop or global wallpaper.

FAQ

1) Why do I get a very blurry desktop background when I set the picture as wallpaper?

First make sure your picture pixels are greater than 480 x 360, then go to Settings – Wallpaper, and switch the value of Ground glass to Off.

2) What image formats are compatible with the player?

Both .PNG and .JPG are available.

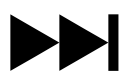
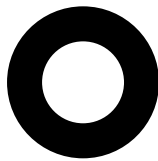
3) Can I edit the picture?

Only rename is available, no picture editing option is provided.

4) How to enter words when renaming?

Please refer to "About Search" in the Music chapter.

FM Radio

Key	Action	Result
	Short press	Prev track
	Short press	Next channel
	Short press	Back to Prev-level
	Long press	Activate the multifunctional menu
	Short press	Resume / Pause broadcast
	Swipe clockwise	Volume + / Scroll down menu item / Scroll right frequency
	Swipe Anticlockwise	Volume - / Scroll up menu item / Scroll left frequency
	Short press	Activate frequency bar / Add to favorites

Key	Action	Result
	Long press	Long press for 2 seconds to turn off the screen <i>(Short press to wake up.)</i>

About The Multifunctional Menu

In the broadcast window of FM radio, long press the button  to pop up the multifunctional menu:

- **Play--** Resume broadcast.
- **Pause--** Pause broadcast.
- **Channel List--** List all available channels from auto search and manual search.
- **Favorite channel list--** List all channels marked as "favorites".
- **Frequency Range--** Change frequency area, options included: America, Asia, Australia, Europe, Japan.
- **Re-search Channel--** Start Auto channel search.
- **Audio output--** Change the audio output mode: Headset, Speaker. Short press  to switch.
- **Record FM--** Turn on radio recording to

record your favorite radio and programs. All recordings will be stored in the "Recording files" folder by default."

FAQ

1) Is wired headset required as antenna to use FM radio.

Yes, you must connect a wired headset to start FM Radio.

2) Is Bluetooth headphone available for radio?

Of course. It is recommended that you plug in a wired headset and start FM before connecting your Bluetooth headset.

Because the default audio output end of the player is the last connected device.

3) How to search for a station manually.

In the broadcast window, short press button  to bring up the frequency bar. Then, swipe the click wheel clockwise or counterclockwise to fine-tune the frequency until the best listening effect is achieved. After that, short press the button  again to save it to the favorite channel lists.

4) How to add the current channel to the favorites?

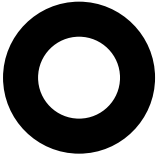
In the broadcast window, short press button  to bring up the frequency bar.

Find the target channel on the frequency bar, then short press the button  again. At this point, the white diamond mark below the channel will turn blue.

5) Can I record FM radio and how?

Long press the button  to bring up the multifunctional menu, then select Record FM to start recording the current station. While recording, the upper left corner of the FM window displays a flashing recording logo. To save the recording, short press the button  and confirm to save.

Bluetooth

Key	Action	Result
	Short press	Back to prev-level
	Long press	Ignore My Device
	Swipe clockwise	Scroll down menu item or options
	Swipe Anticlockwise	Scroll up menu item or options
	Short press	Confirm the selected menu item and options Connect or Disconnect
	Long press	Long press for 2 seconds to turn off the screen <i>(Short press to wake up.)</i>

FAQ:

1) How to connect or disconnect devices?

Connect: After enabling Bluetooth, all available Bluetooth devices around will be listed under the menu "Other devices".

Swipe the click wheel clockwise or counterclockwise to navigate the target device, and then short press the button  to pair and connect with the device.

Disconnect: Swipe the click wheel clockwise or counterclockwise to navigate the connected device under the menu "My Device". Short press the button and confirm to disconnect the device.

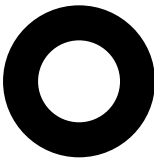
2) How to remove a device from "my device" list?

Swipe the click wheel clockwise or counterclockwise to navigate the target device in My Device. Long press the button  and confirm to ignore the device.

3) How to refresh the device list?

Turn Bluetooth off and back on.

Settings

Key	Action	Result
	Short press	Back to prev-level
	Long press	Activate EQ customization
	Swipe clockwise	Scroll down menu item
	Swipe Anticlockwise	Scroll up menu item
	Short press	· Confirm the selected menu item · Switch the option value
	Long press	Long press for 2 seconds to turn off the screen <i>(Short press to wake up.)</i>

- **Shutdown--** Turn off the device.
- **Timed shutdown--** Set the time of timed shutdown, options included: off, 10min, 20min, 30min, 60min, 90min, 120min. Short press the button  to switch.

- **Shuffle--** shuffle on or off. Short press the button  to switch. (Only available for music, not for audiobooks)
- **Repeat--** Change the loop mode: off, list loop, single loop. Short press the button  to switch. (Only available for music, not for audiobooks)
- **Equalizer--** Provide 10 preset style: Normal, Classical, Dance, Flat, Folk, Heavy Metal, Hip Hop, Jazz, Pop, Rock. And allow customization of EQ.

Tips: The currently running style is marked with green, and the style being located is marked with light blue.

- **Key lock--** Enable or disable key lock.
On --- After enabling this feature, the buttons will be inactive in power-saving mode (i.e., when the screen is off). You must wake up the screen first to restore the button functionality. This helps prevent accidental presses of the function keys that could interrupt or stop playback, or skip tracks.
(Short press the button  to wake up the screen.)
Off --- After disabling this feature, all function buttons will respond normally even in power-saving mode (i.e., when the screen is off) without needing to wake up

the screen. However, this may not prevent accidental presses that could interrupt playback, stop, or skip tracks.

- **Key tone**-- Enable or disable key tone. Short press the button  to switch.
- **Key vibration**-- Enable or disable key vibration. Short press  to switch.
- **Wallpaper**-- Set the device's desktop or global wallpaper.

Note: Setting "Ground glass" to "On" will blur the wallpaper.

- **Backlight**-- Adjust backlight time: 10s, 15s, 30s, 45s, 60s, 2m, 5m, Always. Short press  to switch. When the device is idle for more than the set time, the screen will turn off and enter power-saving mode.
- **Brightness**-- Adjust the device screen brightness by swiping the click wheel clockwise or counterclockwise.
- **Display battery**-- Select whether to display the battery percentage in the title bar.
- **Date & Time**-- Set the date, time, and time format of the device, etc.
- **Theme**-- Choose a preset theme or a custom theme. The device offers 4 preset themes.
- **Language**-- Set the language of the device.

- **Factory reset**-- Reset the device to factory settings.

Warning: all saved files on the device will be deleted. Please be careful.

- **Clear cache**-- Clearing the system cache resolves common issues such as unexpected slow performance, response delays, or errors.
- **About**-- View device information, including storage capacity, used space, available space, and firmware version.

FAQ

1) How to use custom equalizer?

Navigate to any preset style under "Settings>>Equalizer" , and long press the button  to activate the customized EQ. Then press the button  /  to jump to the target frequency band to be adjusted. And swipe  clockwise or anticlockwise to change the value of this band. If you are not satisfied with the current customization, you can select "Reset" to restore to the default state. After making adjustments, short press the button  to bring up a popup asking "Save equalizer parameter changes? ", Click "Yes" to confirm and save.

2) How did shuffle and repeat work together?

Shuffle	Repeat	Result
On	Off	Shuffle in the current playlist or folder, stop after all songs are played
	List loop	Shuffle in the current playlist or folder, continue to shuffle after all songs are played
	Single loop	Loop the current track
Off	Off	Play sequentially in the current playlist or folder, stop after all songs are played
	Off	Play sequentially in the current playlist or folder, continue to sequential play after all songs are played
	Single loop	Loop the current track

Specification

Bluetooth version: 4.2

Product Size: 3.8 x 2.4 x 0.3 inch

Weight: 2.3 oz

Screen Size: 2.4 inch (480 x 360 pix)

Battery Capacity: 1250mAh

Charging Time: 90 Minutes

Storage: 64GB/128GB

Music Playtime: 25-35 hours

Music format: MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, MP2, AMR, MID, M4R, MMF, WV, AIF, AIFF, AU, RA, MKA, AC3, CAF

Charging Time: 90 Minutes

Video format: MP4, MKV, MOV, AVI

Photos format: JPG, PNG

FM Receiving Frequency: 87.5 MHz ~ 108 MHz

Warning:

>> Do not leave the device in an environment where the temperature is too low or too high (below -10°C or above 50°C) for a long time. Extreme temperature environments will cause the device to deform and shorten the service life of the device;

>> Do not use the equipment under thunderstorm weather;

>> Do not place the device in the water for a long time;

>> Do not expose the equipment to the sun for a long time.

Warranty

Thank you for purchasing our products. You will enjoy the following services when using this product.

Warranty period: Within one year from the date of sale.

Warranty scope: Limited to the product host.

Warranty terms:

- ① Within 1 year after purchase, failure or damage caused by product quality problems can be replaced for free or full refund.
- ② Accessories are not included in the warranty, such as USB cable, earphones, etc., but if quality problems occur within 7 days after purchase, they can be replaced for free.
- ③ The following conditions are not covered by the warranty
 - Out of the warranty period.
 - It has been disassembled or repaired privately by the customer.
 - Man-made damage, accidental damage or deformation.
 - Failure caused by installation and use in abnormal environments such as high temperature, high pressure, and humidity.
 - Damage caused by natural disasters such as lightning strikes, floods, and earthquakes.

Contact us:

Email: youqi-csc@hotmail.com

Online support:

<https://www.facebook.com/innioasis/>



We promise to reply you as soon as possible within 24 hours.