innioasis

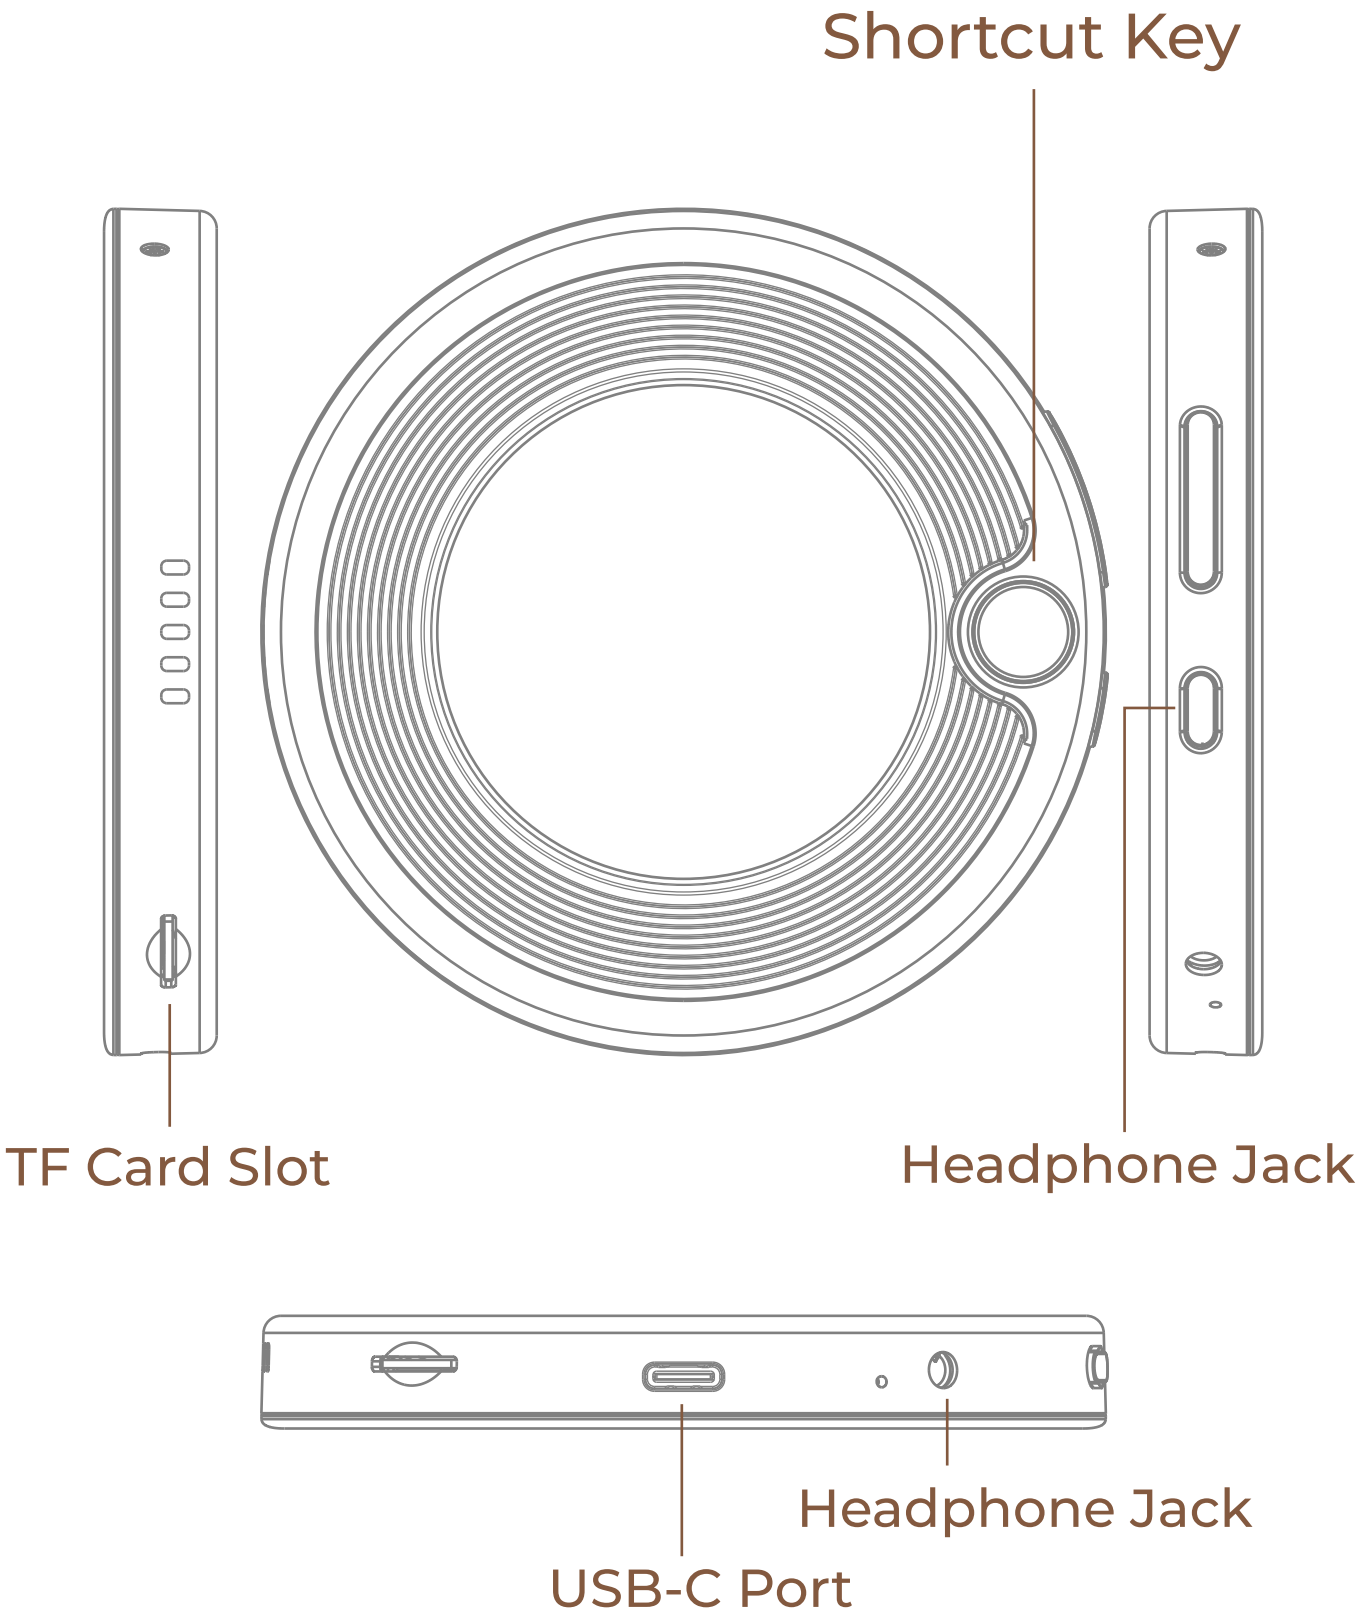


Aura D1 Audiobook & Music Player

Version V1.0

1. Do not disassemble the device by yourself. Built-in battery. Do not expose to high temperature, direct sunlight or immerse in water.
2. Charging: Use a standard 5V USB adapter. **Do NOT use fast charging / PD fast charge chargers**.
3. Headphone volume: Listening at high volume for long periods may damage your hearing. Please keep the volume at a moderate level.
4. Do not wear headphones while driving or crossing roads.
5. Adult supervision is required when children use this product. Keep small accessories away from children to avoid choking hazards.
6. Storage environment: Avoid humid and high-temperature conditions.

- MP4 Player ×1
- Charging & Data Cable ×1
- User Card ×1


Shortcut Key
TF Card Slot
Headphone Jack
Headphone Jack
USB-C Port

1. **USB-C Port:** For charging; connect to computer to transfer music and ebook files.
2. **Headphone Jack:** For wired headphone connection.
3. **Power Button:** Power on / power off.
4. **TF Card Slot:** Expandable storage, supports 32G1T TF cards.
5. **Shortcut Key:** Long press for onetouch play; short press to pause; doublepress for next track.

1. First time use: It is recommended to fully charge the device before use.

2. Power on: Long-press the Power button for 3 seconds to power on.

3. File transfer: Connect the player to your computer via USBC cable. Copy music, e-book and video files into the player's internal storage or a TF card inserted into the TF-card slot.

Supported audio formats:

MP3, WAV, FLAC, APE, OGG, M4A, AAC, WMA, MP2, AMR, MID, M4R, MMF, WV, AIF, AIFF, AU, RA, MKA, AC3, CAF

Supported ebook formats:

PDF, EPUB, WORD, DOC, DOCX, MOBI, TXT, DJVU, CHM, RTF, ODT, FB2, AZW, COMIC, CBR, CBZ

Supported video formats:

MPEG-1/2/4, DivX (1-6), XviD, H.263, H.264/AVC, H.265/HEVC, WMV 1/2/9 (VC-1)

Video Maximum supported video resolution:
480×480 pixels

FM frequency range:
87.5 MHz ~ 108 MHz

4. Touch-screen operation: Tap icons to enter functions; swipe left / right to switch pages.

5. Bluetooth connection: Go to Settings and turn on Bluetooth. Disconnect your headphones or speakers from other devices first. Tap Scan on the player's Bluetooth page and pair with your audio device. The Bluetooth name of this player is Aura D1.

6. Wi-Fi connection: Open Settings>> Tap Wi-Fi>> Turn Wi-Fi on>> Select your network from the list>> Enter the password>> Tap Connect and wait for connection confirmation

Music Playback





Music Playback

1. Open the music list page

① Sort options: Recently Added, Title, Artist, Album, Reverse order

② Display options: All Songs, Folders, Favorites, Playlists, Artists, Albums, Genres, Recently Added, Rescan Songs

③ Locate currentlyplaying track; batchoperation options

2. Open music playback page

④ Play settings: Playback mode, Equalizer, screen visual effects, add to playlist, gapless playback, show cover art, track details

⑤ Quick add to favorites

⑥ Quick switch playback mode

⑦ ⏮ /⏸ /⏭ Previous track, Play / Pause, Next track

EBook Reading

- Open Listora or ReadEra application.

FM Radio

1. Online radio
    - Open Simple Radio and listen to online radio stations via Wi-Fi.
2. Local FM radio
    - Open FM Radio app. Headphones must be plugged in to act as an antenna.
    - ⏮ / ⏭ : Auto-scan stations
    - ★ : Save station to favorites

- ⋮ : Scan all stations, play via speaker, record radio program

⚠ *Notice: Wired headphones are required and serve as the radio antenna.*

Video Playback

- Open the video-player app and select a file to start playback.

System Settings

Wi-Fi, Bluetooth, Display Settings, Sound Settings, Storage, Applications, System Update, Auto-Screen-Off, Date & Time, Power-on Timer, Language Settings, About Device, Factory Reset.

1. **Computer fails to recognize the player:** Replug the USB-C cable, try different USB ports on your computer, or test with another computer.

2. **After file copying:** Safely eject the hardware device from your computer before disconnecting the cable, to prevent file corruption or loss.

Symptom	Possible Cause	Solution
Cannot power on	Battery fully drained	Charge the device for 30 minutes then try to power on
Copied music files do not show up	Unsupported format / files stored in wrong folder	Verify valid audio format; put files in root or music folder
E-book cannot open	Format compatibility issue	Confirm supported ebook format
Bluetooth cannot find headphone	Headphone not in pairing mode	Put your headphone into pairing mode and rescan
No FM radio signal	No wired headphone plugged in	Plug in wired headphones (works as antenna)
Device freezes or crashes	Temporary system glitch	Use a pin to trigger hardware forcerestart
Cannot charge	Fast-charging charger in use	Replace with standard 5V nonfastcharge charger

Screen size:	2.1 inch
Memory:	1GB RAM + 8GB internal storage
Max TF-card support:	32G~1T
Battery capacity:	1380mAh
Playback endurance:	Approx. 25-hour audio playback via headphones
Interface:	USB-C
Headphone jack:	3.5mm
Operating temperature:	32°F ~ 113°F

1. Warranty: 12-month limited warranty for non-human-induced damage.

2. Troubleshooting advice: Please refer to the Troubleshooting section first for common issues.

3. Customer Support Email: support@innioasis.com.
   We will respond to your emails within 2 business days.